




# GATEWAY ML6720 RAM Replacement

Detailed steps on the replacement of the laptop's wireless card.

Written By: Nathan Da Silva

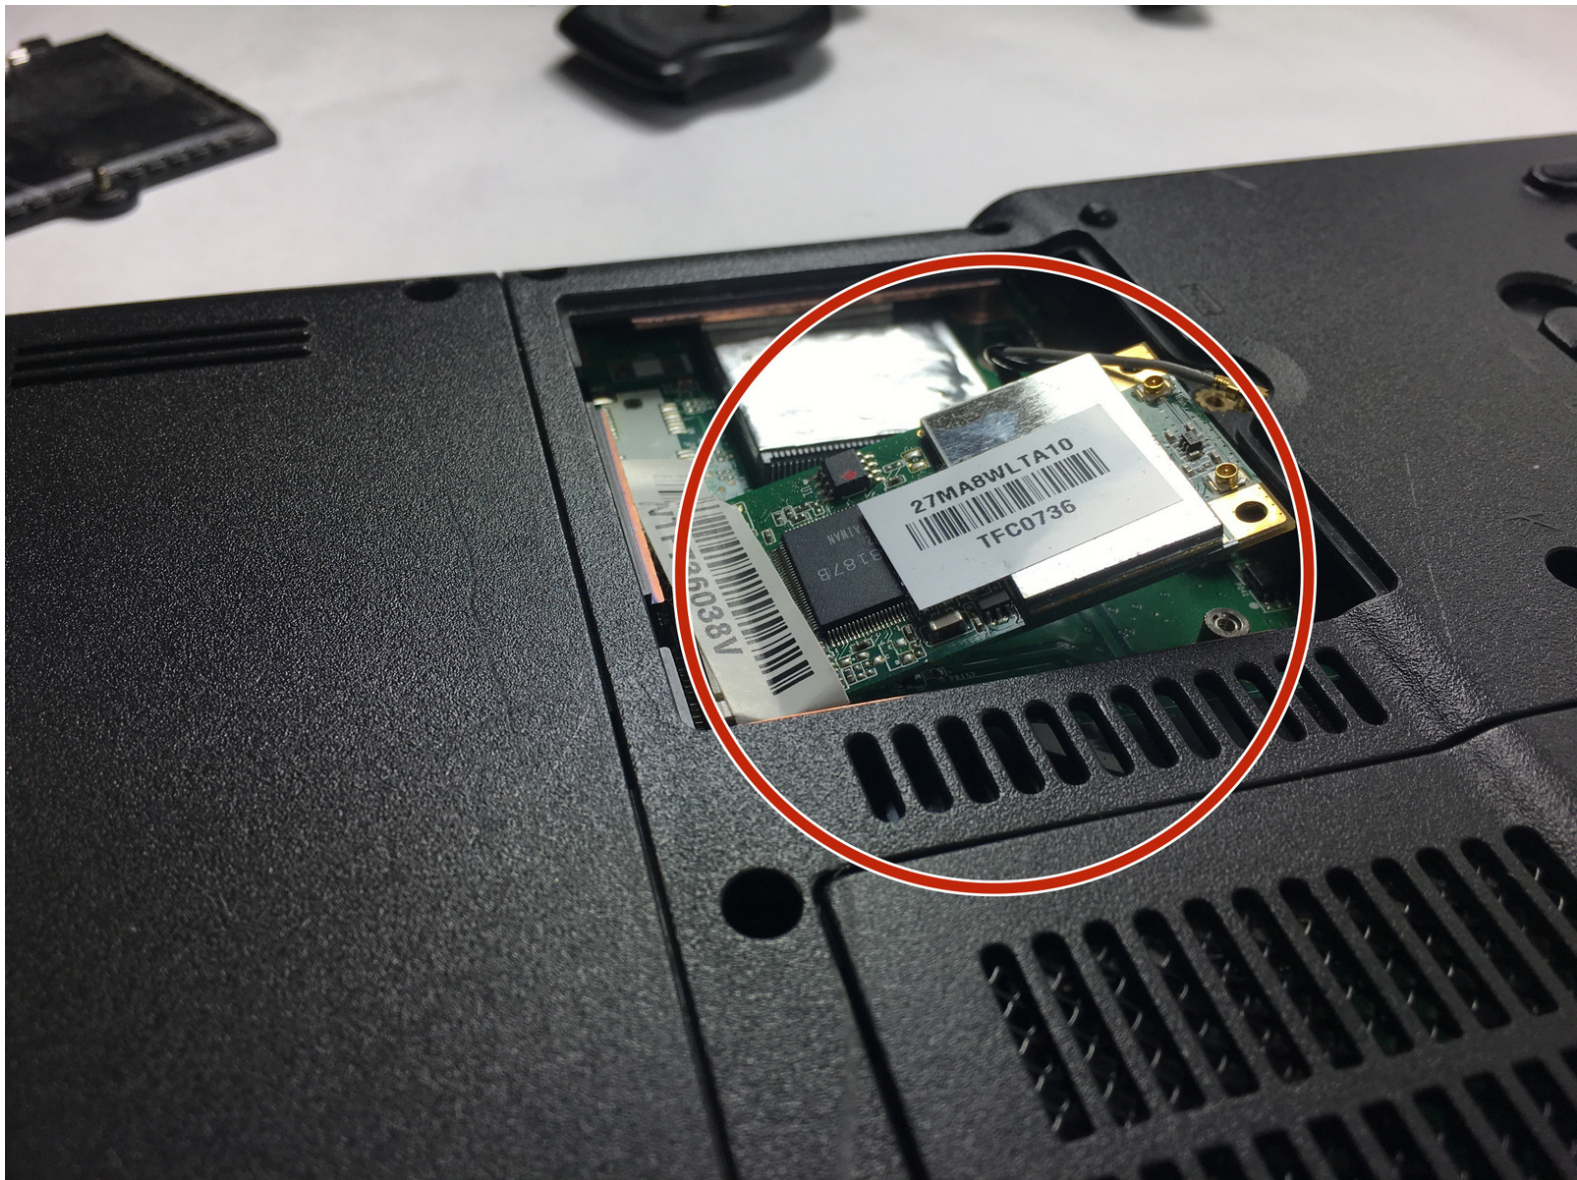



## TOOLS:

- Flathead 3/32" or 2.5 mm Screwdriver (1)
  - Tweezers (1)
  - 1.5 mm Flathead Screwdriver (1)
-



## Step 1 — Wireless Card



- Flip the laptop on to its backside.

## Step 2



- Locate the RAM at the middle left section of the laptop's backside.

## Step 3



- Insert the correct screwdriver mentioned in the guide.
- Loosen and remove the single screw at the top of the RAM's cover plate.

## Step 4



- Flip the RAM's cover plate up and off.




## Step 5



- Remove the RAM from the compartment by first removing the two wires connected to the RAM card.

## Step 6

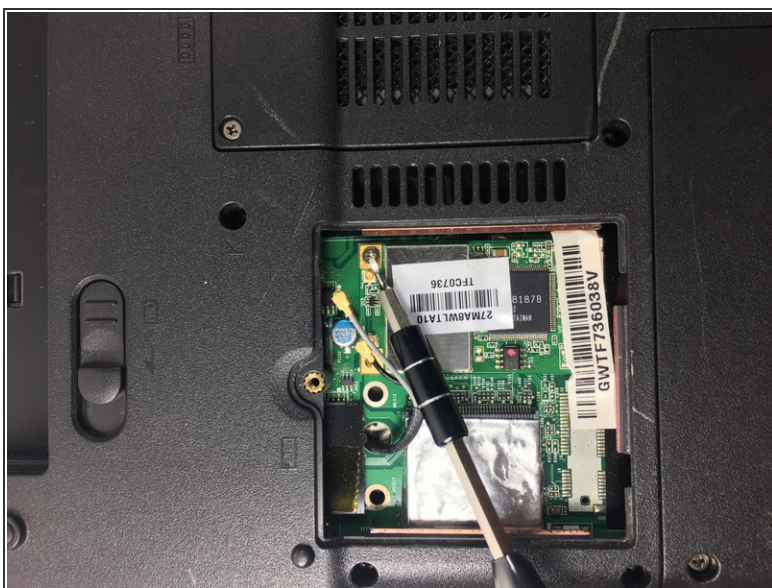

- Remove the two screws remaining at the top left and right corners of the RAM.
- Slide the RAM up and out of the compartment.

To reassemble your device, follow these instructions in reverse order.

